

0177


Store / Location : Babyshop (360 mall) Date : 28-2-2025

Completed By : ..... Service Type (M/Q/A) : .....

| No.                    | Check                               | TASK DESCRIPTION                                                                          | Frequency (Q) |           |             | X | Remarks |
|------------------------|-------------------------------------|-------------------------------------------------------------------------------------------|---------------|-----------|-------------|---|---------|
|                        |                                     | AHU / FCU No :                                                                            | M             | Q         | A           |   |         |
| 1                      | <input checked="" type="checkbox"/> | Check For Unusual Noise                                                                   | X             | X         | X           |   |         |
| 2                      | <input checked="" type="checkbox"/> | Switch Off & Isolate Power                                                                | X             | X         | X           |   |         |
| 3                      | <input checked="" type="checkbox"/> | Inspect & Clean Condensate Drain Tray And Connections                                     | X             | X         | X           |   |         |
| 4                      | <input checked="" type="checkbox"/> | Clean Air Filter And Check Their Condition, Recommend Replacements As Needed              | X             | X         | X           |   |         |
| 5                      | <input checked="" type="checkbox"/> | Inspect Coil Condition, Clean As Necessary                                                |               | X         | X           |   |         |
| 6                      | <input checked="" type="checkbox"/> | Check Actuator Valve Operation                                                            | X             | X         | X           |   |         |
| 7                      | <input checked="" type="checkbox"/> | Check Chilled Water Lines Condition And Insulation                                        |               |           | X           |   |         |
| 8                      | <input checked="" type="checkbox"/> | Inspect All Trunking, Cabling, Wiring, Insulation, Terminal Covers & Connections          | X             | X         | X           |   |         |
| 9                      | <input checked="" type="checkbox"/> | Clean Grills & Diffusers As Required                                                      |               |           | X           |   |         |
| 10                     | <input checked="" type="checkbox"/> | Vent Air From Cooling Coils. Report Any Significant Air Locking For Further Investigation |               | X         | X           |   |         |
| 11                     | <input checked="" type="checkbox"/> | Restore Power Supply And Run Unit                                                         | X             | X         | X           |   |         |
| 12                     | <input checked="" type="checkbox"/> | Check Thermostat Operation                                                                | X             | X         | X           |   |         |
| 13                     | <input checked="" type="checkbox"/> | Check Starter/vfd Operation                                                               | X             | X         | X           |   |         |
| 14                     | <input checked="" type="checkbox"/> | Inspect & Clean Strainers Where Fitted                                                    |               |           | X           |   |         |
| 15                     | <input checked="" type="checkbox"/> | Check Equipment Current                                                                   | X             | X         | X           |   |         |
| 16                     | <input checked="" type="checkbox"/> | Check Equipment Voltage                                                                   | X             | X         | X           |   |         |
| 17                     | <input checked="" type="checkbox"/> | Check Room Temperature                                                                    | X             | X         | X           |   |         |
| Electrical (DB/lights) |                                     |                                                                                           |               |           |             |   |         |
| 1                      | <input checked="" type="checkbox"/> | Check And The Clean The Db                                                                |               | X         | X           |   |         |
| 2                      | <input checked="" type="checkbox"/> | Check And Tightening O The Loose Wire If Any                                              |               | X         | X           |   |         |
| 3                      | <input checked="" type="checkbox"/> | Check All The Breakers For The Proper Functioning                                         |               | X         | X           |   |         |
| 4                      | <input checked="" type="checkbox"/> | Check All The Transformers / Ballast For Sign Of Overheating                              |               | X         | X           |   |         |
| 5                      | <input checked="" type="checkbox"/> | Check All The Wall Power Socket For Proper Functioning                                    |               | X         | X           |   |         |
| Plumbing               |                                     |                                                                                           |               |           |             |   |         |
| 1                      | <input checked="" type="checkbox"/> | Check water connection for any leakage                                                    |               | X         | X           |   |         |
| 2                      | <input checked="" type="checkbox"/> | Check the sink for any leakage                                                            |               | X         | X           |   |         |
| 3                      | <input checked="" type="checkbox"/> | Check all the plumbing fitting for any leakage                                            |               | X         | X           |   |         |
| Drain Flushing         |                                     |                                                                                           |               |           |             |   |         |
|                        |                                     |                                                                                           | One Month     | Two Month | Client Call |   |         |
| 1                      | <input checked="" type="checkbox"/> | Check the Unit Floor drains and Flush                                                     |               |           |             |   |         |
| 2                      | <input checked="" type="checkbox"/> | Check the Unit Floor Cleanouts and Flush                                                  |               |           |             |   |         |

Equipment Notes:

Notes:

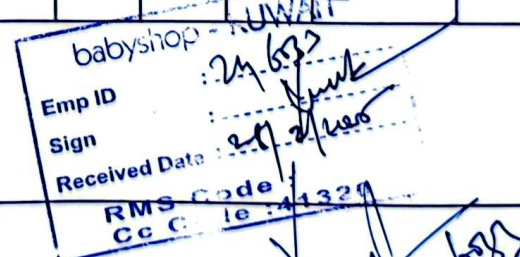

Technician Sign : Rahul

Client Incharge Sign : [Signature]

Hawally- Block 11- Street 169 - Building 13525 - Saad Arbid Jalawi Building - Floor 1st - Office 1  
Website: [www.ateamkw.com](http://www.ateamkw.com) - Email: [contact@ateamkw.com](mailto:contact@ateamkw.com) - [info@ateamkw.com](mailto:info@ateamkw.com)